

APPLY MASKING TAPE (1" WIDTH) ONTO SURFACE OF ROOF PANEL, ROOF SIDE EXTENSIONS AND DECK OPENING UPPER PANEL AND POSITIONED ALONG THE EDGE OF THE BACKLIGHT OPENING (REF SECTION A-A ABOVE). INSTALLATION OF TAPE IN TWO SEPARATE LENGTHS AND WITH BREAK LINE AT CENTER LINE OF CAR WILL FACILITATE LATER REMOVAL.

APPLY MASKING TAPE TO TOP AND SIDES OF WINDSHIELD FENCE AND TO OUTER SURFACE OF BACKLIGHT FENCE AROUND ENTIRE PERIPHERY (REF, STEP 4 VIEW H)

LOCATE AND MARK CENTERLINE OF THE ROOF PANEL AT FRONT AND REAR THESE MARKS ARE TO BE LINED UP WITH CENTERLINE NOTCHES AT FRONT AND REAR OF FABRIC DURING APPLICATION.

FOLD VINYL ROOF COVER ALONG CENTERLINE AND ALIGN WITH CENTERLINE OF CAR AND COVERING LEFT SIDE OF CAR. CLAMP OR SECURE IN PLACE. APPLY APPROPRIATE SHIELD OVER EXPOSED UNDERSIDE OF COVER AT THAT AREA WHICH LIES SYMMETRICALLY OPPOSITE TO THE EXPOSED RIGHT HALF OF THE BACKLIGHT FRAME.

APPLY A .010-.015 WET FILM OF 2447125 ADHESIVE (M.S. CC224) TO ROOF PANEL, ROOF SIDE EXTENSION AND BACKLIGHT FRAME, AS SHOWN AND TO EXPOSED UNDERSIDE OF FABRIC. THE APPLICATION OF ADHESIVE IS TO BE PERFORMED IN TWO OR MORE STEPS AS REQUIRED TO CONTROL DRYING TIMES. CARE MUST BE TAKEN TO INSURE COMPLETE COVERAGE OF BOTH ROOF PANEL AND FABRIC. ADHESIVE MUST BE APPLIED INTO THE DRAIN TROUGH AND ON THE OUTSIDE VERTICAL SURFACE OF THE DRAIN TROUGH FLANGE AND DOWN THE SURFACE OF THE "A" PILLAR TO MAKE CERTAIN THAT THE ROOF COVER WILL BE BONDED TO THESE AREAS. MASK WHERE NECESSARY TO AVOID CONTAMINATION OF DECORATIVE SURFACE OF ROOF COVER AND OF PAINTED AREAS WITH ADHESIVE.

REMOVE THAT PORTION OF THE 1" WIDE MASKING TAPE WHICH WAS INSTALLED PER STEP 1-A ABOVE FROM RIGHT SIDE HALF OF CAR.

APPLY RIGHT SIDE BACKLIGHT PAD TO BACKLIGHT FRAME.

WHEN ADHESIVE FILMS ON BOTH THE ROOF PANEL AND FABRIC ARE TACKY BUT DO NOT WET THE FINGER WHEN LIGHTLY TOUCHED LOWER THE FABRIC TO THE ROOF AND STRETCH TIGHT, WORKING OUT WRINKLES FROM CENTERLINE TOWARD THE DRAIN TROUGHS.

REPEAT ITEMS 2-B, 2-C, 2-D, 2-E & 2-F ABOVE THE LEFT SIDE OF CAR.

IF DESIRED, INDICATE AT FRONT OF COVER WITH A REMOVABLE TYPE MARKER, THE LOCATIONS OF MOULDING CLIP ATTACHING HOLES IN THE WINDSHIELD REVEAL TO AID IN SUBSEQUENT INSTALLATION OF MOULDING CLIPS.

PRESS FABRIC INTO WINDSHIELD RABBIT FACE UPPER USING A DULL POINTED TOOL.

PRESSURIZE BY ROLLING COMPLETE COVER.

SECURE MATERIAL TO WINDSHIELD REVEALS IN THE FOLLOWING MANNER:

WHEN ADHESIVE REACHES PROPER TACKINESS, LOWER THE FABRIC DOWN THE "A" PILLAR AND STRETCH TIGHT WORKING OUT THE WRINKLES. PRESS AND SMOOTH OUT THE FABRIC DOWN THE SURFACE OF THE "A" PILLAR MAKING SURE THE FABRIC MAKES COMPLETE CONTACT IN THIS AREA. PRESS FABRIC INTO THE WINDSHIELD RABBIT FACE IN CORNER AREAS AT SEAMS AND DOWN THE "A" PILLAR USING A DULL POINTED TOOL.

SECURE MATERIAL TO WINDSHIELD AND "A" PILLAR RABBIT FACE IN UPPER CORNERS AND AT OR NEAR SEAMS USING STAPLE #6025255 ONE AT EACH DECK AND UPPER "A" PILLAR SEAM LOCATION, AND TWO IN EACH UPPER CORNER.





TRIM FABRIC AT BASE OF W/SHIELD AND "A" PILLAR RABBIT FACE LEAVING MASKING TAPE IN PLACE. AT BOTTOM OF "A" PILLAR TRIM FABRIC ON BOTH SIDES USING APPROPRIATE FIXTURES AS GUIDES.

SECURE LOWER INBOARD END OF MATERIAL TO "A" PILLAR RABBIT FACE USING ONE #6025255 STAPLE PER SIDE OR ONE #6000180 DRIVE NAIL (OPT) PER SIDE. DO NOT APPLY FASTENERS WHERE MOULDING CLIP FASTENING HOLES ARE MARKED.

COVER LOWER EDGE OF MATERIAL ON "A" PILLAR WITH 3446456-7 MLDG USING 6024271 (S/O 6023247) SCREW.

NOTE: ALL DRIVE NAILS ARE TO BE INSTALLED BY FIRST USING A CENTER PUNCH AND DRILLING AT ASSEMBLY A.116 DIA. HOLE AT EACH LOCATION.

CAUTION: EXTREME CARE SHOULD BE TAKEN TO INSURE THAT ALL METAL CLIPS FROM THE DRILLING OPERATION ARE CLEANED FROM THE WINDSHIELD AND BACKLIGHT REVEAL AREAS.

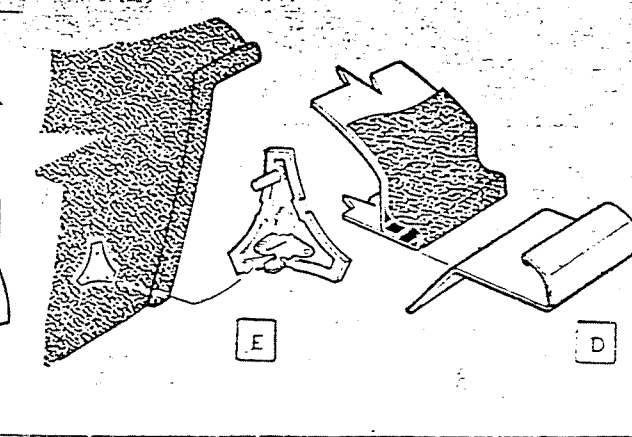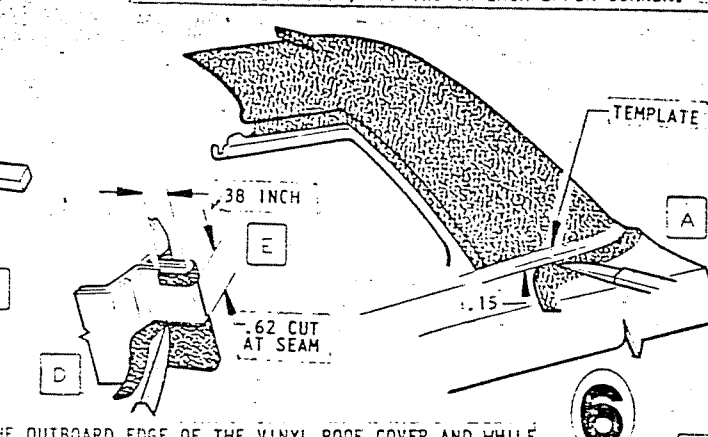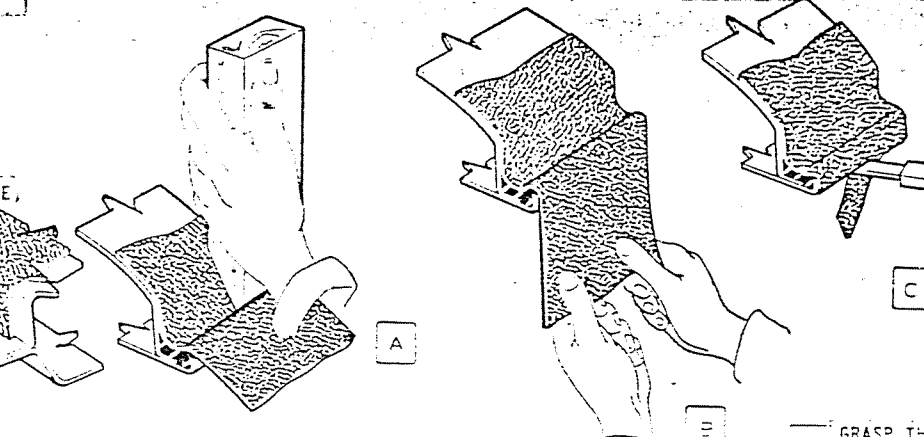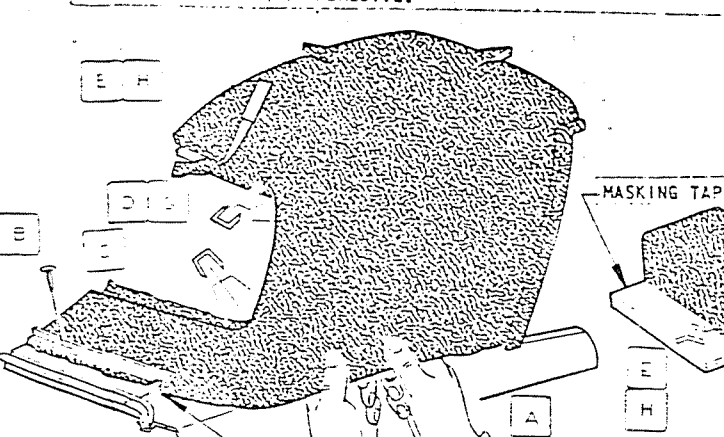

COVER LOCATING NOTCH. SECURE MATERIAL TO BACKLIGHT WINDOW REVEALS IN THE FOLLOWING MANNER:

WHEN ADHESIVE REACHES PROPER TACKINESS LOWER THE FABRIC DOWN THE ROOF SIDE EXTENSION ALIGNING NOTCH IN COVER WITH COACH JOINT AND WORK OUT THE WRINKLES. PRESS AND SMOOTH OUT FABRIC AGAINST ROOF SIDE EXTENSION AND DECK UPPER PANEL SURFACE.

LIFT LOWER REAR EDGE OF VINYL COVER AND APPLY A STRIP OF 2498169 SEALER (M.S. CC224) TO THE BODY LOCATED ALONG THE RETAINER ATTACHING HOLES (REF VIEW 2-D ABOVE) EXTEND 3" BEYOND COACH JOINT.

LOWER THE REAR EDGE OF VINYL COVER OVER SEALER STRIP. PRESSURIZE AND PUNCH HOLES THROUGH COVER USING EXISTING RETAINER ATTACHING HOLES IN DECK UPPER PANEL AS LOCATORS. INSTALL VINYL ROOF COVER REAR RETAINER WITH 6023975 SCREWS.

MAKE ROUGH CUT IN VINYL COVER AT BACKLIGHT OPENING AREA USING TWO EXISTING PUNCHED HOLES ALONG CENTER LINE AS GUIDES.

IF DESIRED, INDICATE WITH A REMOVABLE TYPE MARKER, THE LOCATIONS OF MOULDING CLIP ATTACHING HOLES IN THE BACKLIGHT REVEAL TO AID IN SUBSEQUENT INSTALLATION OF MOULDING CLIPS.

PRESS FABRIC INTO REAR WINDOW UPPER, SIDE AND LOWER REVEALS INTO RABBIT FACE USING A DULL POINTED TOOL, AND WORKING OUT WRINKLES IN THE FABRIC AS REQUIRED.

SECURE MATERIAL TO BACKLIGHT RABBIT FACE IN CORNERS AND AT SEAMS USING STAPLE #6025255, THREE IN EACH CORNER, ONE AT EACH SEAM LOCATION, AND ONE BETWEEN EACH MLDG CLIP LOCATION. DO NOT APPLY STAPLES WHERE MOULDING CLIP FASTENING HOLES ARE MARKED.

TRIM FABRIC AT BASE OF REAR WINDOW RABBIT FACE, LEAVING MASKING TAPE IN PLACE.

USING A DULL POINTED TOOL, PRESS FABRIC INTO THE DRAIN TROUGH TO ACHIEVE MAXIMUM CONTACT OF ROOF COVER MATERIAL TO DRAIN TROUGH IN THIS AREA AND THEREBY OBTAIN THE MAXIMUM BOND. THIS OPERATION IS TO BE PERFORMED FOR THE FULL LENGTH OF THE OUTBOARD SIDE OF THE ROOF COVER.

GRASP THE OUTBOARD EDGE OF THE VINYL ROOF COVER AND WHILE PULLING THE MATERIAL OUTWARD AND DOWN USE THE UPPER EDGE OF THE DRAIN TROUGH FLANGE AS A BREAKOVER FOR DRAPING THE MATERIAL ONTO THE OUTBOARD DRAIN TROUGH FLANGE FACE. CARE MUST BE TAKEN TO AVOID PULLING LOOSE THE ROOF COVER MATERIAL PREVIOUSLY APPLIED TO THE BASE OF THE DRAIN TROUGH. PRESS THE MATERIAL AGAINST THE DRAIN TROUGH FLANGE FACE FOR THE FULL LENGTH OF THE OUTBOARD SIDES OF THE ROOF COVER.

TRIM EXCESS ROOF COVER MATERIAL HANGING BELOW DRAIN TROUGH FLANGE AT OR SLIGHTLY ABOVE THE LOWER EDGE OF THE FLANGE.

FORWARD FROM THE POINT WHERE THE DRAIN TROUGH ENDS AND DOWN THE "A" PILLAR, TRIM OFF EXCESS ROOF COVER MATERIAL APPROX. .38 INBOARD FROM EDGE OF FLANGE.

CUT OUT "A" PILLAR SEAM ALONG UNDERSIDE AND OUTBOARD EDGE OF FLANGE.

NOTE: THE ABOVE OPERATIONS ARE TO BE PERFORMED PRIOR TO INSTALLATION OF HEADLINING ASSEMBLY.

FIND AND PUNCH BELT MOLDING HOLES IN ROOF EXTENSION USING AN APPROPRIATE TEMPLATE TRIM FABRIC ON A LINE .15 BELOW THE HOLE CENTERS. BLENDING THE TRIMMED EDGE TO JOIN THE TRIMMED EDGE OF THE COVER AT THE LOWER END OF THE DRAIN TROUGH.

REMOVE MASKING TAPE FROM FENCE FLANGE (REAR WINDOW)

REF: INSTRUCTION MANUAL 2654911 SECTION D, PAGE 13.0.13.1 FOR BONDED GLASS INSTALLATION.

APPLY MOLDING ROOF SIDE DRAIN TROUGH, APPLY MLDG. RETAINERS ALONG W/SHIELD AND BACKLITE REVEAL AREAS.

APPLY A .25 DIA. BALL OF 1750994 SEALER (M.S. CC224) TO ALL STUDS PRIOR TO INSTALLATION OF MEDALLION TO VINYL TOP FABRIC.

NOTE: ALL OF THE ABOVE OPERATIONS TO BE PERFORMED PER (P.S. 4470)

■ DENOTES TOP MATERIAL ■ DENOTES ADHESIVE

NO.	REV.	DATE	BY	CHKD.	APP.	DESCRIPTION
14100-530	0	07-10-69	WJC	JBL	CR	REVISED
91227-167	0	07-10-69	WJC	JBL	CR	REVISED
2654911	0	07-10-69	WJC	JBL	CR	REVISED

MODELS		F/J-C-29 & G/J-C-23 S/CJDE A78	
DRAWN	CHECKED	APP.	DATE
WALRIZ	J. BLACK	CR	5-12-69
ENGINEERING ILLUSTRATION		MANUAL NO.	
DEPT. 3440		2654911	
ROOF OUTSIDE COVER		SECTION PAGE	
		D 2.0	