


①

WITH THE WINDOWS IN THE UP POSITION, INSTALL THE REGULATOR HANDLE IN A HORIZONTAL POSITION WITH THE KNOB FACING FORWARD.

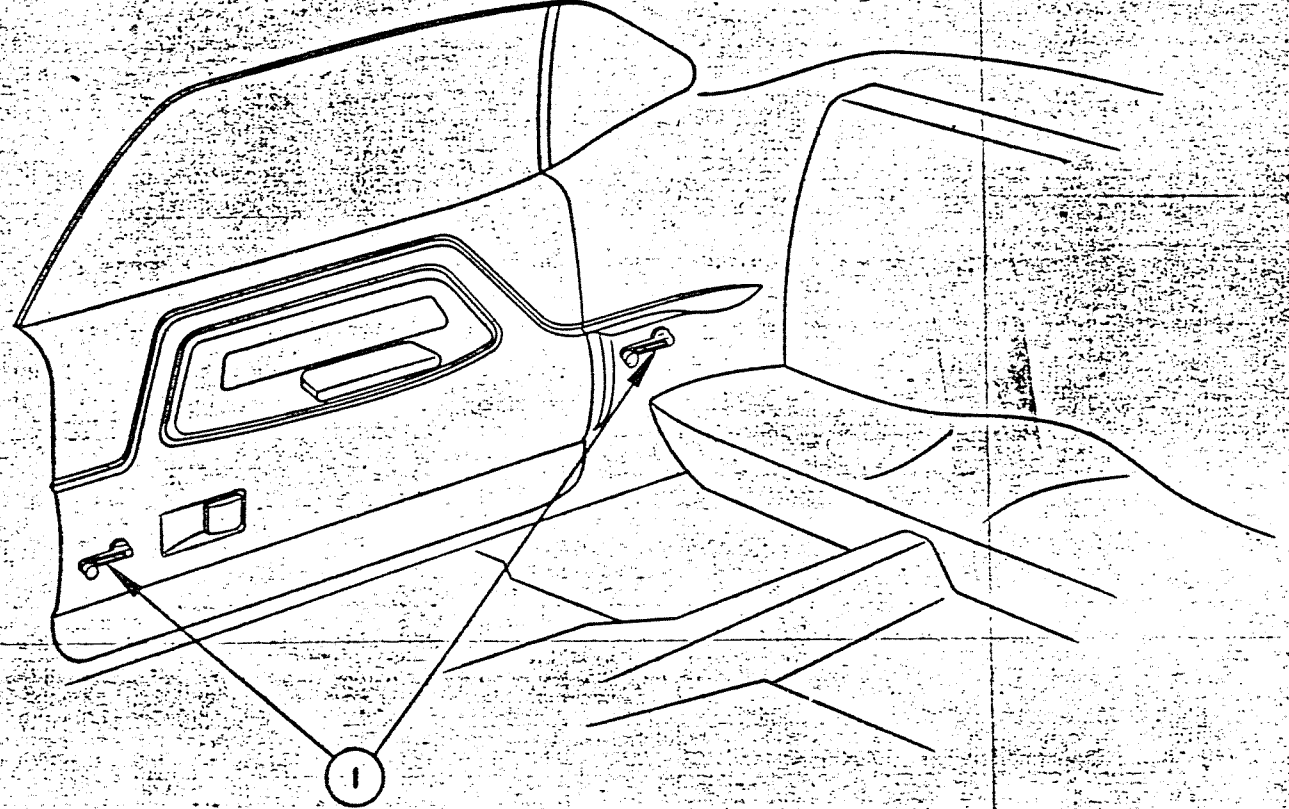

INSTRUCTIONS

										MODELS			FG/BJ-0-00							
										ENGINEERING ILLUSTRATION			DEPT. 3440		DRAWN		CHECKED		DATE	
										PRODUCT PLANNING & DEVELOPMENT STAFF			CHRYSLER CORPORATION		J.B. BLACK		J.W.		4-2-69	
										WINDOW REGULATOR HANDLE POSITIONING			SECTION		PAGE		E		8.0	
										A G SER MODS ADDED			DATE							
C.R. NO.	LET	WAS	DATE DRCK' R	C.R. NO.	LET	WAS	DATE DRCK' R	C.R. NO.	LET	WAS	DATE DRCK' R	C.R. NO.	LET	WAS	DATE DRCK' R	C.R. NO.	LET	WAS	DATE DRCK' R	